


# 1. Baler Frame

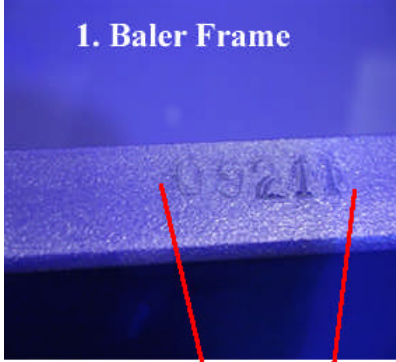

# Baler

## Where to find the Serial Number (SN)

1. Stamped in Baler Frame
2. Name plate on Baler Frame (SN & Model #)
3. Stamped in Autoty Inserter Cabinet
4. In Control Panel (3 places)
  - a) above disconnect
  - b) UL label number tied to SN
  - c) on drawings
5. On the Manual Cover

